



Creating Security Solutions.  
*With Care.*

## Elegant Keypad



**Models: RPKELW, RPKELWP, RPKELB, RPKELBP**

## User Guide

# Contents

<b>Introduction .....</b>	<b>3</b>
Installation and Programming .....	3
<b>LCD Indicators.....</b>	<b>3</b>
<b>Keypad Keys.....</b>	<b>4</b>
Control Keys .....	4
Emergency Keys .....	5
Function Keys.....	5
Numerical Keys .....	5
Keypad Settings .....	5
<b>Proximity Tag .....</b>	<b>6</b>
<b>Cleaning the Keypad.....</b>	<b>6</b>
<b>Changing the User Codes .....</b>	<b>6</b>
<b>RISCO Group Limited Warranty .....</b>	<b>7</b>
<b>Contacting your Installer / Supplier-Agent .....</b>	<b>8</b>
<b>Contacting RISCO Group .....</b>	<b>8</b>

## Introduction

RISCO Group's Elegant Keypad is a slim, sensitive and reliable contemporary designed keypad that is responsive to touch.

The Elegant Keypad enables to control your RISCO Group security systems as well as program its features.

- Available both with and without proximity reader
- Simple to install with incorporated back plate
- Compatible with RISCO Group's wired and hybrid intrusion systems.





## Installation and Programming



For the Elegant Keypad Installation Guide, refer to our website at:

<http://www.riscogroup.com/support/downloads>

For information about programming the system refer to the relevant RISCO security systems installer and user manuals.

## LCD Indicators










Icon	Indication	Description
 <b>Power</b>	On	System is operating properly from AC power and backup battery is in good condition
	Off	No power
	Slow Flash	System is programming
	Rapid Flash	System trouble (fault)
 <b>Arm (Set)</b>	On	System is armed (set) in Full Arm or Stay Arm mode
	Off	System is disarmed (unset)
	Slow Flash	System is in Exit Delay
	Rapid Flash	Alarm condition
 <b>Stay/Bypass (Part Set/ Omit)</b>	On	System is in Stay Arm (Part Set) or Zone Bypass (omit) mode
	Off	No bypassed zones in system
 <b>Ready</b>	On	System is ready to be armed (set)
	Off	System is not ready to be armed (set)
	Slow Flash	System is ready to be armed (set) while exit/entry zone remains open

Icon	Indication	Description
 <b>Fire</b>	On	Fire alarm in progress
	Off	Normal operation
	Flashing	Fire circuit problem
 <b>Tamper</b>	On	Zone/keypad/external module has been tampered
	Off	All zones are operating normally




## Keypad Keys

The keys on the keypad can be used for a variety of functions as explained below.

### Control Keys

Key	Description
	In Normal Operation mode: Used for Away (Full set) arming (setting)
	In Normal Operation mode: Used for Stay arming (Partial setting)
	In User Functions menu: Used to select “No” or change data
	Used to disarm (unset) the system after a user code is entered
	Used to scroll up a list
	Used to scroll down a list
	Used to move the cursor to the left
	Used to move the cursor to the right
<b>i</b>	Provides the system status (press for 2 seconds)
	In Normal Operation mode: Used to enter the User Functions menu
	In User Functions menu: Used to move back one step in the menu
	Used to terminate commands and confirm data to be stored
<b>X</b>	In User Functions menu: Used to select “No” or change data. Active in selected system versions

## Emergency Keys

Key	Description
	Pressing both keys simultaneously for at least two seconds activates a Fire alarm
	Pressing both keys simultaneously for at least two seconds activates an Emergency alarm
	Pressing both keys simultaneously for at least two seconds activates a Police (Panic) alarm

## Function Keys




Key	Description
A B C D	Used to arm (set) groups of zones (by default) or to activate a prerecorded series of commands (macros)

## Numerical Keys

Key	Description
1 2 3 4 5 6 7 8 9 0	Used to input numeric numbers when required

## Keypad Settings


To define keypad settings follow this procedure:

1. Press  for two seconds until the Keypad Settings menu appears
2. Select the relevant icon using the   keys:

 Brightness

 Contrast

 Volume

 Language

RP432 Model


**NOTE:** Set the keypad language according to the language in the control panel.

3. Press ✓
4. Press the ◀ ▶ keys to adjust the level settings.
5. Press ✓ to save the adjustment.
6. Press 📄 to exit the Keypad settings menu.

**NOTE:** Each keypad's settings are defined separately.

## Proximity Tag

Present the Proximity Tag as shown in the following illustrations:

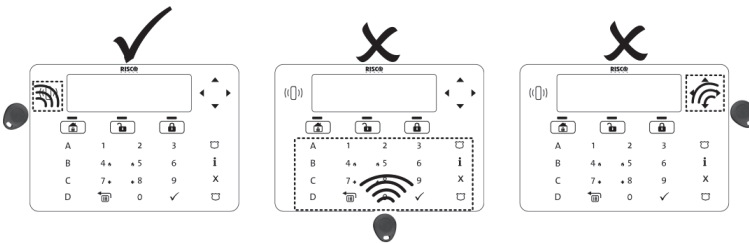

## Cleaning the Keypad

### To lock the keypad:

Press 1 and 3 simultaneously for 2 seconds.

The keypad will beep to notify that the keypad is locked. The keypad will automatically unlock itself after 45 seconds. To release the keypad lock manually, press 1 and 3 simultaneously for 2 seconds.

### To clean the keypad

Use a non-abrasive damp cloth. Do not expose the screen directly to liquid.

## Changing the User Codes

Change the user codes regularly.

For information about programming the system refer to the relevant RISCO security system installer and user manuals.

## RISCO Group Limited Warranty

RISCO Ltd. ,its subsidiaries and affiliates (the "Seller") warrants its products to be free from defects in materials and workmanship under normal use for 24 months from the date of production. Because the Seller does not install or connect the product, and because the product may be used in conjunction with products not manufactured by the Seller, the Seller cannot guarantee the performance of the security system which uses this product. The Seller's obligation and liability under this warranty is expressly limited to repairing and replacing, at the Seller's discretion, within a reasonable time after the date of delivery, any product not meeting these specifications. The Seller makes no other warranty, expressed or implied, and makes no warranty of merchantability or of fitness for any particular purpose. Under no circumstances should the Seller be liable for any consequential or incidental damages for breach of this or any other warranty, expressed or implied, or upon any other basis of liability whatsoever. The Seller's obligation under this warranty shall not include any transportation charges or costs of installation or any liability for direct, indirect, or consequential damages or delay. The Seller does not warrant that the product may not be compromised or circumvented; that the product will prevent any personal injury or property loss by burglary, robbery, fire or otherwise; or that the product will in all cases provide adequate warning or protection. The buyer/customer understands that a correctly installed and maintained alarm may only reduce the risk of burglary, robbery or fire without warning, but is not an insurance or a guarantee that such an event will not occur or that there will be no personal injury or property loss as a result thereof. Consequently the Seller shall have no liability for any personal injury, property damage or loss based on a claim that the product fails to give warning. However, if the Seller is held liable, whether directly or indirectly, for any loss or damage arising under this limited warranty or otherwise, regardless of cause or origin, the Seller's maximum liability shall not exceed the purchase price of the product, which shall be a complete and exclusive remedy for the Seller. No employee or representative of the Seller is authorized to change this warranty in any way or grant any other warranty. Batteries installed in or used with the products are explicitly excluded from this or any other warranty. Seller gives no warranty whatsoever as to batteries and buyer's only remedy (if any) shall be in accordance with the warranty provided (if and to the extent provided) by the manufacturers of batteries.

**WARNING:** This product should be tested at least once a week.

**CAUTION:** Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to local regulations.

## Contacting your Installer / Supplier-Agent

When calling for service, ordering components, or for questions related to your camera, please contact us for assistance:

**Company/agent address,  
phone, e-mail address:** \_\_\_\_\_

**Contact / department:** \_\_\_\_\_

**Hours of business:** \_\_\_\_\_

**Website URL:** \_\_\_\_\_

**Company logo:** \_\_\_\_\_

**Other supplier-specific  
information:** \_\_\_\_\_

## Contacting RISCO Group

RISCO Group is committed to customer service and product support. You can contact us through our website ([www.riscogroup.com](http://www.riscogroup.com)) or at the following telephone and fax numbers:

### United Kingdom

Tel: +44-(0)-161-655-5500  
[support-uk@riscogroup.com](mailto:support-uk@riscogroup.com)

### Belgium (Benelux)

Tel: +32-2522-7622  
[support-be@riscogroup.com](mailto:support-be@riscogroup.com)

### China (Shenzhen)

Tel: +86-755-82789285  
[support-cn@riscogroup.com](mailto:support-cn@riscogroup.com)

### Italy

Tel: +39-02-66590054  
[support-it@riscogroup.com](mailto:support-it@riscogroup.com)

### USA

Tel: +1-631-719-4400  
[support-usa@riscogroup.com](mailto:support-usa@riscogroup.com)

### Poland

Tel: +48-22-500-28-40  
[support-pl@riscogroup.com](mailto:support-pl@riscogroup.com)

### Spain

Tel: +34-91-490-2133  
[support-es@riscogroup.com](mailto:support-es@riscogroup.com)

### Brazil

Tel: +55-11-3661-8767  
[support-br@riscogroup.com](mailto:support-br@riscogroup.com)

### Israel

Tel: +972-3-963-7777  
[support@riscogroup.com](mailto:support@riscogroup.com)

### France

Tel: +33-164-73-28-50  
[support-fr@riscogroup.com](mailto:support-fr@riscogroup.com)

### China (Shanghai)

Tel: +86-21-52-39-0066  
[support-cn@riscogroup.com](mailto:support-cn@riscogroup.com)

### Australia

Tel: +1800-991-542  
[support-au@riscogroup.com](mailto:support-au@riscogroup.com)



All rights reserved.

No part of this document may be reproduced in any form without prior written permission from the publisher.